



# Assembly Instructions - TV Floor Stand

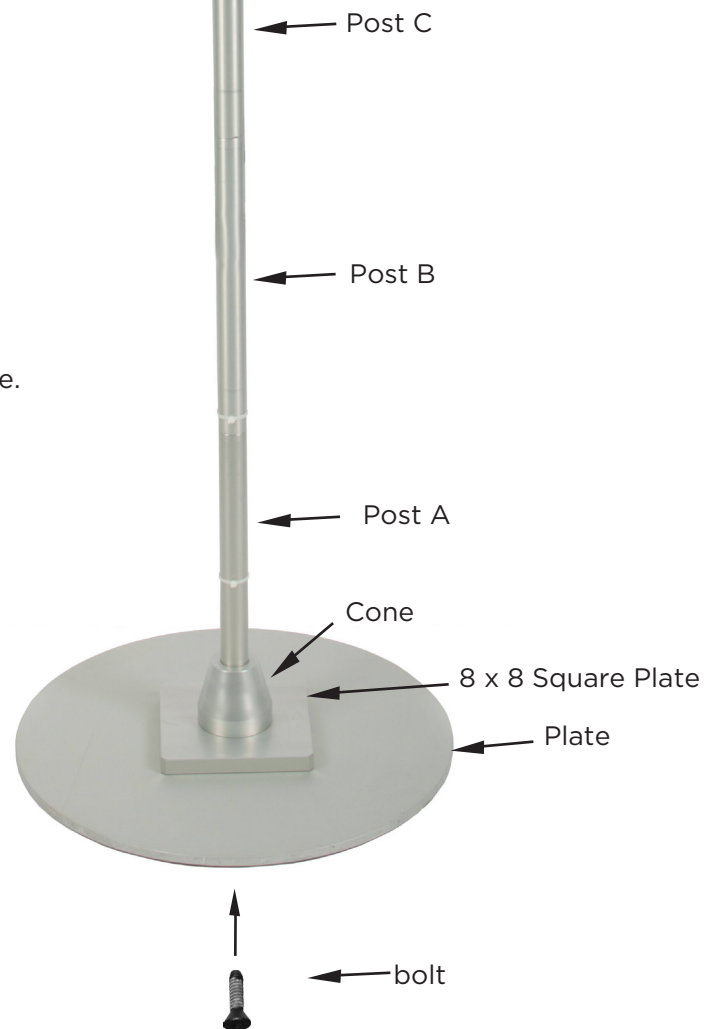

## Tools Required:

- 8mm Hex Key (supplied)
- 4mm or 6mm bolts (supplied)

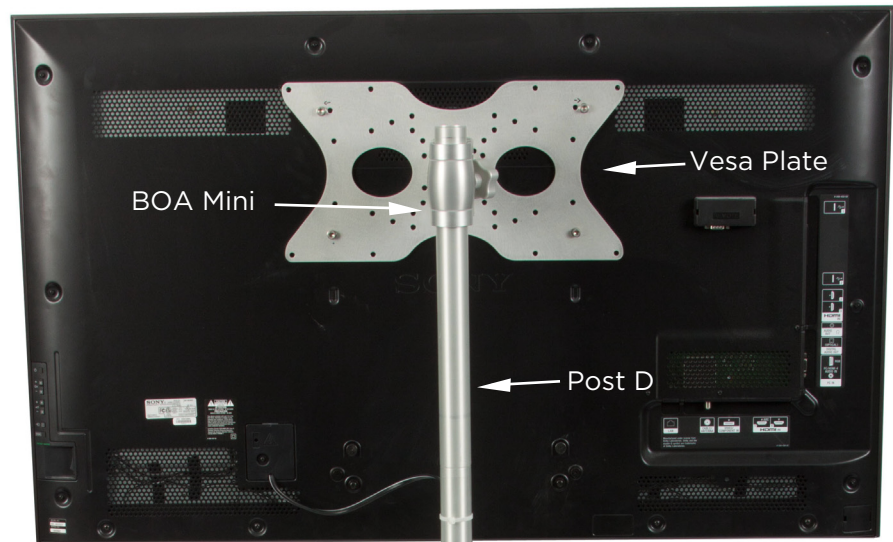

## Instructions:

1. Place Square Plate and cone onto Circular Plate.
2. Insert Post A into Cone.
3. Place bolt through bottom of plate and tighten with 8mm hex key.
4. Insert Post B into Post A and tighten.
5. Insert Post C into Post B and tighten.
6. Insert Post D into Post C and tighten.
7. Attach Vesa Plate to TV.
8. Slide BOA Mini over Post D.
9. Tighten Knob securely.
10. Attach Vesa Plate to BOA Mini.
11. Make sure the set screws on the top and bottom of the BOA Head are tight so the tv does not pivot forward.

Monitors   
in Motion